

# SURFACE CLEANER

## Operation manual EN



### Contents of carton box:

- 1 x Surface cleaner
- 1 x Instruction Leaflet

\*The picture serves for reference only and it may not represent an exact match of the device delivered

## **INTENDED USE:**

This surface cleaner is designed to clean large areas such as paths, driveways, decks and other large surfaces. The two rotating nozzles ensure an efficient, yet even clean.

The surface cleaner must only be used with a pressure washer and is compatible with the 3300 PSI pressure washers. It is also compatible with most pressure washers that have a ¼" quick connect coupler and a maximum pressure of less than 3300 PSI. It is designed to be powered by the trigger assembly of your pressure washer.

The surface cleaner is intended for private use only. It must only be used for its prescribed purpose. Any use other than those mentioned in this instruction leaflet will be considered a case of misuse. Please read and familiarise yourself with this instruction leaflet before using this product.

The manufacturer shall not be liable for any unauthorised modifications made to the surface cleaner, nor for any damage resulting from such changes.

## **DESCRIPTION OF SYMBOLS:**

The following symbols represent important about the product and instructions on its use.



Denotes risk of personal injury, loss of life or damage to the tool in case of non-observance of the instructions in this manual.



Wear hearing protection. Wear eye protection. Wear breathing protection.



Read and understand instruction leaflet before using this product.



Do not direct the jet at any person, domestic animal, live electrical equipment or the pressure cleaner unit itself.

## SCOPE OF PRODUCT:



## IMPORTANT SAFETY WARNINGS:

**WARNING!** For your own safety, and for the safety of others, please read the operating instructions carefully before using this patio cleaner for the first time.

Keep the manual in a safe place and pass it on to any subsequent owner to ensure that the information contained there in is available at all times.

**CAUTION!** Pressure washers can be dangerous if they are not operated correctly! The jet must never be directed at people, animals, electric equipment connected to the power supply, or against the actual petrol pressure washer. Read the manufacturer's instruction manual for the petrol pressure washer before using the appliance.

**WARNING!** Never reach under the surface cleaner when it is being operated.


- Do not direct the jet nozzle at yourself or others in order to clean clothes and shoes.
- Do not operate the petrol pressure washer when other people are in the immediate vicinity.
- Ensure any operators of the pressure washer and anyone else in the immediate vicinity are wearing appropriate protective clothing.
- Do not start the pressure washer until the patio cleaner rests on the surface you are cleaning.

- Do not let the surface cleaner remain stationary on soft surfaces, such as wood.
- Striking any raised obstacle during operation will damage the machine. If contact does occur and results in vibration when operating machine, stop and replace spray bar. Continued operation could result in serious injury or damage to machine.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- People who are unfamiliar with the operating instructions are not permitted to use the equipment. The operation of the equipment is not authorised for people under the age of 18 years.
- Take appropriate measures to keep children away from the equipment in the vicinity of flammable liquids or gases. Non-observance will result in a risk of fire or explosion.
- Always test a small area to see if the surface can withstand the high pressure.
- Store the equipment in a dry place and out of reach of children.
- Children must be supervised in order to ensure that they do not play with the equipment.

**CAUTION!** To avoid damage to the equipment and any possible injury to persons or animals resulting from this.

- Do not work with damaged or incomplete equipment, or with equipment that has been modified without the approval of the manufacturer.
- Drain water in cold weather to avoid freezing. Protect surface cleaner from frost.
- Do not modify the surface cleaner.
- Never lock trigger gun open with any device.
- Keep clear of rotating nozzles.

## ASSEMBLY

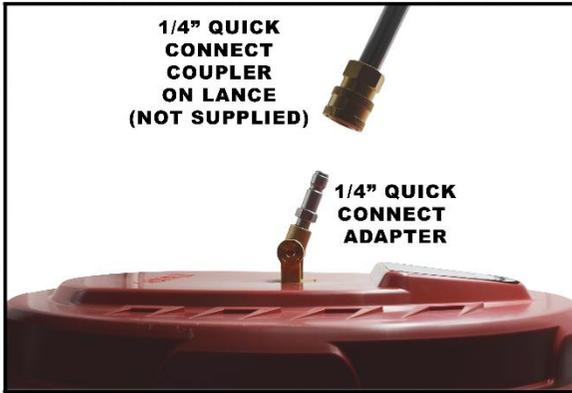

### **WARNING!**

Make sure that the pressure washer (not supplied) is not in operation during assembly. Connect the surface cleaner's 1/4" quick connect adapter into the coupler of

your petrol pressure washer's lance (not supplied).

### **OPERATION:**

**WARNING!** Take heed of the backstroke generated by the jet of the water. Stand firmly and hold the pressure washer's trigger assembly gun tightly. You may otherwise injure yourself or other bystanders.

- This accessory is designed to be powered by the trigger assembly of your pressure washer.
- Do not release water from the pressure washer until the surface cleaner is on the surface you are cleaning.
- The surface cleaner is not designed for scouring or scrubbing.
- Avoid using the surface cleaner over balcony edges or staircase edges. Ensure the entire cleaning surface of the surface cleaner sits on a flat work surface when in use.
- The internal jet mechanism must not touch the work surface area.

### **TECHNICAL SPECIFICATIONS:**

- Maximum Input Water Pressure
- Diameter
- Connection
- Nozzles

**DISPOSAL INSTRUCTIONS:**

Tools that are no longer usable should not be disposed of with household waste but in an environmentally friendly way. Please recycle where facilities exist in your area. Check with your local council authority for recycling advice.

Recycling packaging reduces the need for landfill and raw materials. Reuse of recycled material decreases pollution in the environment. Please recycle packaging where facilities exist. Check with your local council authority for recycling advice.

**CLEANING, MAINTENANCE & STORAGE:**

**WARNING!** Make sure that no part of the surface cleaner is connected to the pressure washer (not supplied) during cleaning or maintenance procedures.

Always keep the surface cleaner clean and free from debris. Do not use any detergents or solvents. Clean the surface cleaner with a soft brush or a slightly moist cloth.

Store the surface cleaner in a dry, frost-free room.

Device type	Surface cleaner
Max. pressure	3300 PSI
Maximum speed	1700 rpm
Connection	1/4" Quick connect
Length	41 cm
Height	13 cm
Width	42 cm
Weight	1,18 Kg

**Warranty Certificate:**

Product type:	<b><i>WASPPER</i></b>	Stamp and signature:
Serial number:		

In pursuit of service enhancement and simplification of communication with customers, the company WPW Center s.r.o. recommends its customers, who purchase this product, to register their product via the manufacturer's website: [www.waspper.com](http://www.waspper.com). This registration will provide inevitable data for faster processing of your complaints or consulting relevant to purchasing of spare parts and accessories. This registration enables the customer to avoid further procedures, as submitting of the purchase receipt or the warranty certificate.

**1.** The manufacturer - waspper s.r.o. - is liable for inherent defects of the product purchased, if such defects become evident within the warranty period. Application of claims for repairs under warranty requires completion and submission of the complaint form via the manufacturer's website: [www.waspper.com](http://www.waspper.com). The product is covered by a full warranty of 24 months for private customers (as defined by the Civil Code) and 12 months for corporate customers (as defined by the Commercial Code). The warranty period commences upon completion and submission of the complaint report via the website in case of simple defects and damages. The commencement of warranty in case of major defects starts upon the product delivery to the manufacturer's address: Waspper s.r.o, Radlinského 20, 05201 Spišská Nová Ves. Acceptance of complaint will be notified to the customer using the contact details entered in the complaint form.

**2.** The warranty does not cover defects incurred due to: wrong operation; improper handling or use contradictory to the operation manual or instructions and recommendations from the company Waspper s.r.o; use or storage of goods within inappropriate areas, especially with respect to temperature, dust formation or ambient humidity; exposure to direct sunlight; damage attributable to natural disasters of force majeure. The warranty does not apply to mechanical damages, any damages due of solid particles, frost or other weather effects. The warranty does not apply to damage to the pump caused by cavitation. Other exemptions from warranty include damages to the engine due to lack of oil and ingress of any other but operating fluid among internal engine components.

**3.** Particular steps of claims processing will be notified to the customer following assessment of the scope of repair by the claims engineer. Whenever the replacement of a damaged component can be performed

by the customer, the latter will receive a relevant spare part only. If the repair by a servicing centre is inevitable, the customer is obliged to mail the damaged device to the manufacturer's address. The device must be complete (including accessories) and packed properly to prevent its damage during transport, it must be free of mechanical damage and contain no operating fluids. If the goods submitted to the servicing centre shows evident signs of damage or excessive wear, the manufacturer reserves the right to reject such consignment without acceptance.

**4.** Claims for repairs under warranty oblige the customer to provide the receipt of purchase (invoice, cash receipt) together with the warranty certificate and written description in support of their claim, including photographic documentation. It is recommended to complete the complaint form via the manufacturer's website to ensure the fastest processing of the claim as possible, if the manufacturer acknowledges such claim as justified, the repaired item will be sent to the customer and the postage/freight will be covered by the manufacturer.

**5.** If the claims engineer finds out the product does not comply qualifications for repair under warranty, the claim will be considered unjustified and the costs of product transport to the customer will be paid by the latter.

**6.** Should the repair period exceed 30 days or if the product is irreparable, the customer will be offered a replacement item.

**7.** Justification of claims will be assessed by the claims engineer at the manufacturer. Justified claims will extend the warranty period by the period taken by the claim processing period. Such action will be confirmed to the customer by means of a document in writing, dispatched together with the product or sent via e-mail. If the product subject to claim contains any discontinued component, the manufacturer will provide the customer with an adequate replacement item with its parameters corresponding with the returned product or even better.

**8.** The customer undertakes to read all the information found on the packaging or in the operation manual; to do so immediately following the product delivery, to acknowledge that preservation of the positive characteristics of the product delivered will be subject to its proper

operation and storage. Any disregard to obligations defined herein relieve the company WPW Center s.r.o. from any liability for defects of goods or damages incurred due to breach of this obligation by the customer or any other third party. The customer is obliged to check the intact condition of packaging and product during the purchase and takeover of the consignment from the postman. Any damage to the packaging must be reported to the carrier and recorded immediately. Any damages found only after unpacking of the product must be notified to the distributor within the maximum period of 4 working days. No later claims for product damage can be accepted.

The warranty conditions of our distribution organisation apply in every country. Potential failures of your devices will be removed free of charge within the warranty period, if due to defects of material or workmanship. To claim the warranty, please submit the sales receipt for your device at your distributor or the closest authorised servicing workshop. For the list of approved servicing centres, see our website at: [www.waspper.com](http://www.waspper.com)

The efforts made by Waspper s.r.o. are aimed at sustainable development of technical parameters and user-friendly parameters of its products. For this reason, the manufacturer reserves the right to alter the design and control features without any prior notification to the end customers. The position of all control and safety features illustrated in this manual corresponds with their actual positioning. This manual does not have to reflect any changes in design of control levers.

Waspper s.r.o.  
Duklianska 51  
052 01 Spišská  
Nová Ves  
Slovakia

